

# Quick Setup Guide

---

WS75UACPA | WS86UACPA

The color and the appearance may differ depending on the products, and the specifications are subjects to change without prior notice the performance.

Download the user manual the website for further details.

<https://www.solum-group.com/>

---

# Important Safety Instructions



The lightning with arrow symbols inside the equilateral triangle is designed to remind users that there is a non-insulating "dangerous voltage" inside the product casing, which may be strong enough to constitute a risk of electric shock.

## WARNING

- 1 To reduce the risk of electric shock, do not remove the cover (or back) as there are no user repairable components inside. Transfer the repair to qualified personnel.
- 2 The exclamation mark inside the equilateral triangle is intended to alert users of important operation and maintenance instructions in the literature accompanying the device.
- 3 Do not install this device in enclosed or building spaces such as bookcases or similar devices, and maintain good ventilation conditions in open spaces. The ventilation openings should not be impeded with items such as newspaper table-cloths, curtains, etc.
- 4 Before installing or operating the device and refer to the information on the external bottom casing for electrical and safety information.
- 5 The power plug/electrical pair is used as a disconnected device, and should remain operable.
- 6 To reduce the risk of fire or electric shock, do not expose this device to rainy or damp environments. The device shall not drip or splash, and objects filled with liquid (such as vases) shall not be placed on the device.
- 7 Batteries (batteries or battery packs) should not be exposed to excessive heat such as sunlight or sparks.
- 8 Do not place the device in an unstable position. The device may fall, causing serious personal injury or death. Many injuries, especially to children, can be avoided by taking simple preventive measures, such as:
  - Use cabinets or brackets recommended by the device manufacturer.
  - Only use furniture that can safely support the device.
  - Do not place the device on tall furniture (such as cabinets or bookcases) without fixing the furniture and device on suitable brackets.
  - Do not place the device on the cloth or other materials between the device and the supporting furniture.
  - Educate children about the dangers of climbing onto furniture to come into contact with the device or its control devices. If your existing device is retained and located, the same precautions should be applied as mentioned above.
- 9 Do not place open flames, such as lighting candles, on the device.
- 10 Keep a minimum distance of 5cm around all edges of the device for sufficient ventilation.
- 11 Hanging the device on the wall.

Warning: This operation requires two people.

To ensure a safe installation, observe the following safety notes:
  - Check that the wall can support the weight of the device and all mount assembly.
  - Follow the mounting instructions provided.
  - The device must be installed on a vertical wall.
  - Make sure to use screws only suitable for material of the wall.
  - Make sure that the cables are placed so that there is not any danger of tripping over them. All other safety instructions about our device are also applicable here.※ Note: Illustrations in this publication are provided for reference only.

---

## Notes for battery disposal

The batteries used in this device contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to local laws or regulations. Do not dispose of batteries with regular household waste. For more information, please contact the local authority or the retailer where you purchased the device.

All trademarks are the property of their respective owners and all rights are acknowledged.



To prevent a prolonged fire, always keep candles or other open flames away from this device.



Correctly dispose of this device. This marking indicates that this device should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

To return your used device, please use the return and collection systems or contact the retailer where the device was purchased. They can take the device for environmentally safe recycling.

---

 
## Checking the Components

 
Contact the vendor where you purchased the product if any components are missing.

Components may differ in different locations.

- Remote control
- Battery
- HDMI cable
- Power cable
- RS232 cable
- User manual
- Quick setup guide
- Warranty guide

# Ports

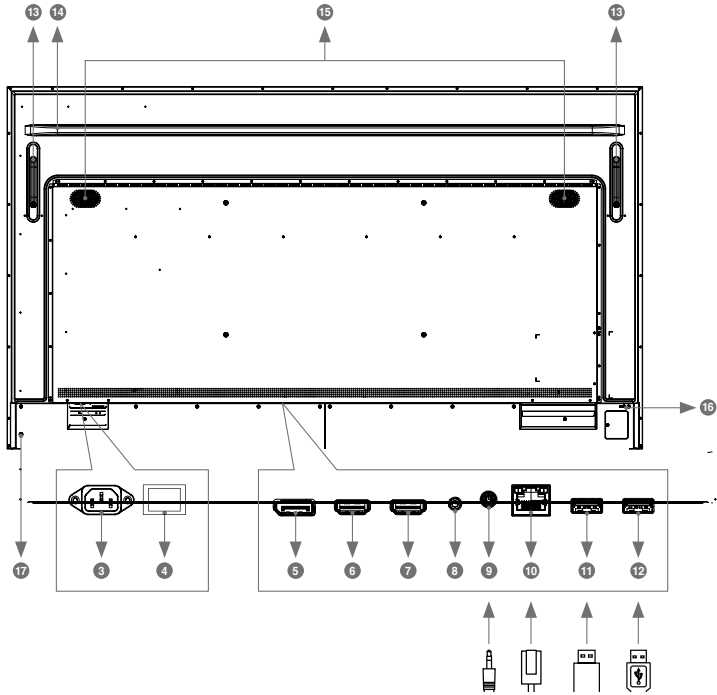

③	AC IN	AC-INLET	AC Connector ( : Alternating current) (AC-IN)
④	AC SWITCH (ON) / (OFF)	MAIN POWER	Main Power Switch
⑤	DisplayPort IN	DisplayPort	DisplayPort Connector
⑥	HDMI1 IN	HDMI	HDMI Connector
⑦	HDMI2 IN	HDMI	HDMI Connector
⑧	RS232C IN	ø 2.5mm Sub-mini Jack	RS232C Connector
⑨	AUDIO OUT	Mini Jack	Audio Connector
⑩	LAN	RJ45	RJ45 Connector
⑪	USB	USB2.0 (5V, 500mA)	USB Connector
⑫	USB	USB2.0 (5V, 500mA)	USB Connector
⑬	Handles		
⑭	Reinforcing rib		
⑮	Speakers		
⑯	Keyhole for Security Lock		
⑰	Power Button 		

---


# Wall Mount Bracket

 ---

## CAUTION

- Follow the manual instructions for the type of mount you have selected. Refer all servicing to qualified service personnel.
- Moving the monitor requires at least two people.
- Before installing, please make sure the wall is strong enough to hold the necessary weight of the monitor and the mount.
- This product cannot be used with the monitor screen facing downward/upward.

### [WALL MOUNTING]

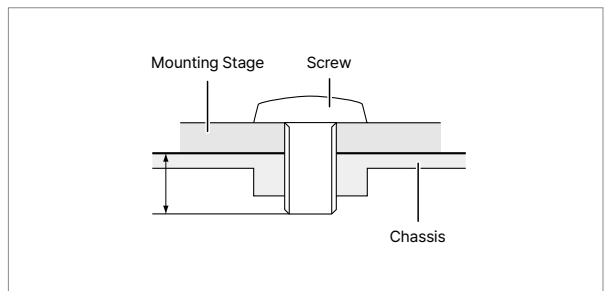

When using the wall mounting, consideration of thickness of the mounting stage needs to be taken. Tighten the M8Screws (4pcs) which "L" length is 16mm to fasten the monitor. Using a screw longer than this may cause electric shock or damage because it may contact with the electrical parts inside the monitor.

---

---

# Troubleshooting Guide

If the monitor fails to operate correctly, please follow the steps below for a possible solution.

1. Perform the adjustments described in OPERATING THE MONITOR, depending on the problem you have.
2. Consult the following items if you cannot find an appropriate adjustment item in OPERATING THE MONITOR or if the problem persists.
3. If you are experiencing a problem which is not described below or you cannot correct the problem discontinue using the monitor and contact your dealer or service center for further assistance.

---

Problem	Check
① The picture does not appear. (Power indicator does not light up.)	<input type="checkbox"/> The Power Cable is firmly seated in the socket. <input type="checkbox"/> The Power Switch is turned ON. <input type="checkbox"/> The AC socket is live. Please check with another piece of equipment.
(Power indicator is green.)	<input type="checkbox"/> If the blank screen saver is in active mode, touch the keyboard or the mouse. <input type="checkbox"/> Increase the Contrast and/or Brightness. <input type="checkbox"/> The computer is ON. <input type="checkbox"/> The Signal Cable is properly connected. <input type="checkbox"/> The signal timing of the computer is within the specification of the monitor.
(Power indicator is red.)	<input type="checkbox"/> If the monitor is in standby mode, touch the keyboard or the mouse. <input type="checkbox"/> The computer is ON. <input type="checkbox"/> The Signal Cable is properly connected. <input type="checkbox"/> The signal timing of the computer is Within the specification of the monitor.
② The screen is not synchronized.	<input type="checkbox"/> The Signal Cable is properly connected. <input type="checkbox"/> The signal timing of the computer is Within the specification of the monitor.
③ The screen position is not in the center.	<input type="checkbox"/> The signal timing of the computer is Within the specification of the monitor.
④ The screen is too bright or too dark.	<input type="checkbox"/> Change contrast and/or brightness.
⑤ The screen is shaking	<input type="checkbox"/> The power voltage is within the specification of the monitor. <input type="checkbox"/> The signal timing of the computer is within the specification of the monitor.
⑥ No sound.	<input type="checkbox"/> The audio equipment (computer etc.) is ON. <input type="checkbox"/> The Audio Cable is properly connected. <input type="checkbox"/> The Volume is turned up. <input type="checkbox"/> The Mute is OFF.
⑦ A strange noise is heard.	<input type="checkbox"/> The Audio Cable is properly connected.

---

# Warning! Important Safety Instructions

Please read the appropriate section that corresponds to the marking on your SOLUM product before attempting to install the product.

## CAUTION

### RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO QUALIFIED PERSONNEL.



This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.



This symbol indicates that this product has included important literature concerning operation and maintenance.

- If your equipment uses an AC adapter:



• Only use the AC adapter with your product by SOLUM.

• Do not use the power cord with other products.

- Do not install this equipment in a confined space such as a case or similar.
- The slots and openings in the cabinet and in the back or bottom are provided for necessary ventilation. The slots and openings must never be blocked or covered.
- The product should be located away from heat sources such as radiators, heat registers, or other products that produce heat.
- Do not place a vessel containing water (vases etc.) on this apparatus, as this can result in a risk of fire or electric shock. (Apparatus shall not be exposed to dripping or splashing)
- The apparatus must be connected to an earthed MAINS socket-outlet (Class I Equipment only). Or use only a properly grounded plug and receptacle (Class I Equipment only).
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.
- As long as this unit is connected to the AC wall outlet, it is not disconnected from the AC power source even if you turn off this unit by POWER.

# SOLUM

---

**EUROPE** : [support-signage@eu.solum-group.com](mailto:support-signage@eu.solum-group.com) / +49 6196 780 74 82

**USA** : [dssupport@solu-m.com](mailto:dssupport@solu-m.com) / +1-877-345-2830

**JAPAN** : [sjc\\_info@solu-m.com](mailto:sjc_info@solu-m.com) / +81-(0)3-6273-3538

**CENTRAL AND SOUTH AMERICA**

**MEXICO** : [sokmin.lee@solu-m.com](mailto:sokmin.lee@solu-m.com) / +52-5572110502

**BRAZIL** : [paulomoratore@solu-m.com](mailto:paulomoratore@solu-m.com) / + 55 11972451001